

Rollout Instructions

Classic & Imperial Series / Express & Colonial Series

Materials Needed

1. Posts for ROSK (includes 4 posts and screws; bumper included with sidemount track only)
2. Loose rollouts
3. Tape measure and screwdriver

Step 1

Attach guides to the posts using the screws provided with the track. Mount the first rollout at the very bottom of the rollout post and space the rest at the customers desired height(s).

(The end of the rollout post where the hole is $1 \frac{5}{16}$ " from the end, is the bottom.)

Step 2

Place your rollout ladder in the pantry and push it all the way to the back, so the actual guide is touching the back of the cabinet. Use the $1 \frac{3}{4}$ " screws to screw the post to the sidewall of the cabinet.

(Place the screws through the holes that are predrilled completely through the rollout post)


Step 1



DT-7/8 & UMFE



DT-GSM

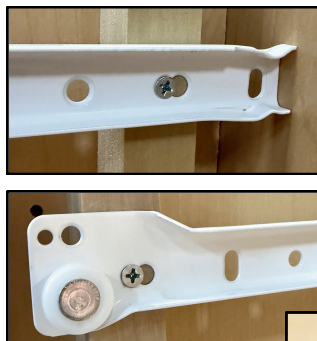

Step 2



Drop your rollouts into the pantry and start using.